

GENERAL DESCRIPTION

Soakaways are rectangular or circular excavations lined with geotextile fabric and filled with clean granular stone or other void forming material that receive runoff from a perforated pipe inlet and allow it to infiltrate into the native soil. They typically service individual lots and receive only roof and walkway runoff but can also be designed to receive overflows from rainwater harvesting systems. Soakaways can also be referred to as infiltration galleries, dry wells or soakaway pits.

Infiltration trenches are rectangular trenches lined with geotextile fabric and filled with clean granular stone or other void forming material. Like soakaways, they typically service an individual lot and receive only roof and walkway runoff. This design variation on soakaways is well suited to sites where available space for infiltration is limited to narrow strips of land between buildings or properties, or along road rights-of-way. They can also be referred to as infiltration galleries or linear soakaways.

Infiltration chambers are another design variation on soakaways. They include a range of proprietary manufactured modular structures installed underground, typically under parking or landscaped areas that create large void spaces for temporary storage of stormwater, allowing it to infiltrate into the underlying native soil. Structures typically have open bottoms, perforated side walls and optional underlying granular stone reservoirs. They can be installed individually or in series in trench or bed configurations. They can infiltrate roof, walkway, parking lot and road runoff with adequate pretreatment. Due to the large volume of underground void space they create in comparison to a soakaway of the same dimensions, and the modular nature of their design, they are well suited to sites where available space for other types of BMPs is limited, or where it is desirable for the facility to have little or no surface footprint (e.g., high density development contexts). They can also be referred to as infiltration tanks.

DESIGN GUIDANCE

MONITORING WELLS

Capped vertical non-perforated pipes connected to the inlet and outlet pipes are recommended to provide a means of inspecting and flushing them out as part of routine maintenance. A capped vertical standpipe consisting of an anchored 100 to 150 mm diameter perforated pipe with a lockable cap installed to the bottom of the facility is also recommended for monitoring the length of time required to fully drain the facility between storms. Manholes and inspection ports should be installed in infiltration chambers to provide access for monitoring and maintenance activities.

PRE-TREATMENT

It is important to prevent sediment and debris from entering infiltration facilities because they could contribute to clogging and failure of the system. The following pretreatment devices are options:

- Leaf screens: Leaf screens are mesh screens installed either on the building eavestroughs or roof downspouts and are used to remove leaves and other large debris from roof runoff.
- In-ground devices: Devices placed between a conveyance pipe and the facility (e.g., oil and grit separators, sedimentation chamber or goss traps), that can be designed to remove both large and fine particulate from runoff. A number of proprietary stormwater filter designs are available
- Vegetated filter strips or grass swales: Road and parking lot runoff can be pretreated with vegetated filter strips or grass swales prior to entering the infiltration practice

FILTER MEDIA


- Stone reservoir: Soakaways and infiltration trenches should be filled with uniformly-graded, washed stone that provides 30 to 40% void space. Granular material should be 50 mm clear stone
- Geotextile: A non-woven needle punched, or woven monofilament geotextile fabric should be installed around the stone reservoir of soakaways and infiltration trenches with a minimum overlap at the top of 300 mm. Woven slit film and non-woven heat bonded fabrics should not be used as they are prone to clogging. Specification of geotextile fabrics should consider the apparent opening size (AOS) for non-woven fabrics, or percent open area (POA) for woven fabrics, which affect the long term ability to maintain water flow. Other factors that need consideration include maximum forces to be exerted on the fabric, and the load bearing ratio, texture (i.e., grain size distribution) and permeability of the native soil in which they will be installed.




Source: Lanark Consultants Ltd



Source: Pennsylvania Department of Environmental Protection

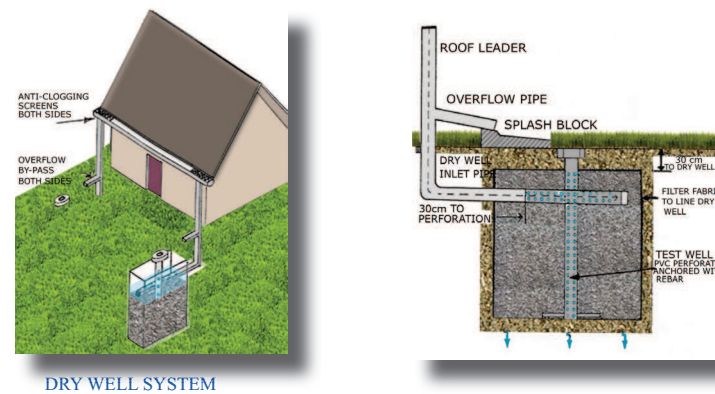

DRY WELL SYSTEM

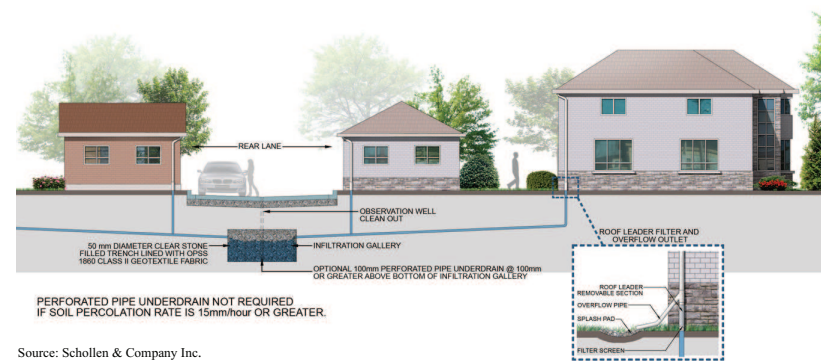

Source: Schollen & Company Inc.

INFILTRATION TRENCH BELOW A LANEWAY



INFILTRATION CHAMBER SYSTEM UNDER A PARKING LOT

GEOMETRY AND SITE LAYOUT

Soakaways and infiltration chambers can be designed in a variety of shapes, while infiltration trenches are typically rectangular excavations with a bottom width generally between 600 and 2400 mm. Facilities should have level or nearly level bed bottoms.

CONVEYANCE AND OVERFLOW

Inlet pipes to soakaways and infiltration trenches are typically perforated pipe connected to a standard non-perforated pipe or eavestrough that conveys runoff from the source area to the facility. The inlet and overflow outlet to the facility should be installed below the maximum frost penetration depth to prevent freezing. The overflow outlet can simply be the perforated pipe inlet that backs up when the facility is at capacity and discharges to a splash pad and pervious area at grade or can be a pipe that is at the top of the gravel layer and is connected to a storm sewer. Outlet pipes must have capacity equal to or greater than the inlet.

ABILITY TO MEET SWM OBJECTIVES

BMP	Water Balance Benefit	Water Quality Improvement	Stream Channel Erosion Control Benefit
Soakaways, Infiltration Trenches and Chambers	Yes	Yes	Partial, depends on soil infiltration rate

CONSTRUCTION CONSIDERATIONS

SOIL DISTURBANCE AND COMPACTION: Before site work begins, locations of facilities should be clearly marked. Only vehicular traffic used for construction of the infiltration facility should be allowed close to the facility location.

EROSION AND SEDIMENT CONTROL: Infiltration practices should never serve as a sediment control device during construction. Construction runoff should be directed away from the proposed facility location. After the site is vegetated, erosion and sediment control structures can be removed.

COMMON CONCERNS

- **RISK OF GROUNDWATER CONTAMINATION**
Most pollutants in urban runoff are well retained by infiltration practices and soils and therefore, have a low to moderate potential for groundwater contamination. To minimize risk of groundwater contamination the following management approaches are recommended:
 - infiltration practices should not receive runoff from high traffic areas where large amounts of de-icing salts are applied (e.g., busy highways), nor from pollution hot spots;
 - prioritize infiltration of runoff from source areas that are comparatively less contaminated such as roofs, low traffic roads and parking areas; and,
 - apply sedimentation pretreatment practices (e.g., oil and grit separators) before infiltration of road or parking area runoff.
- **RISK OF SOIL CONTAMINATION**
Available evidence from monitoring studies indicates that small distributed stormwater infiltration practices do not contaminate underlying soils, even after 10 years of operation.
- **ON PRIVATE PROPERTY**
Property owners or managers will need to be educated on their routine maintenance needs, understand the long-term maintenance plan, and be subject to a legally binding maintenance agreement. An incentive program such as a storm sewer user fee based on the area of impervious cover on a property that is directly connected to a storm sewer could be used to encourage property owners or managers to maintain existing practices. Alternatively, infiltration practices could be located in an expanded road right-of-way or "stormwater easement" so that municipal staff can access the facility in the event it fails to function properly.
- **WINTER OPERATION**
Soakaways, infiltration trenches and chambers will continue to function during winter months if the inlet pipe and top of the facility is located below the local maximum frost penetration depth.

OPERATION AND MAINTENANCE

Maintenance typically consists of cleaning out leaves, debris and accumulated sediment caught in pretreatment devices, inlets and outlets annually or as needed. Inspection via an monitoring well should be performed to ensure the facility drains within the maximum acceptable length of time (typically 72 hours) at least annually and following every major storm event (>25 mm). If the time required to fully drain exceeds 72 hours, drain via pumping and clean out the perforated pipe underdrain, if present. If slow drainage persists, the system may need removal and replacement of granular material and/or geotextile fabric.

SITE CONSIDERATIONS

- **Wellhead Protection**
Facilities receiving road or parking lot runoff should not be located within two (2) year time-of-travel wellhead protection areas.
- **Site Topography**
Facilities cannot be located on natural slopes greater than 15%.
- **Water Table**
The bottom of the facility should be vertically separated by one (1) metre from the seasonally high water table or top of bedrock elevation.
- **Soil**
Soakaways, infiltration trenches and chambers can be constructed over any soil type, but hydrologic soil group A or B soils are best for achieving water balance and channel erosion control objectives. If possible, facilities should be located in portions of the site with the highest native soil infiltration rates. Designers should verify the soil infiltration rate at the proposed location and depth through field measurement of hydraulic conductivity under field saturated conditions.
- **Drainage Area**
Typically are designed with an impervious drainage area to treatment facility area ratio of between 5:1 and 20:1. A maximum ratio of 10:1 is recommended for facilities receiving road or parking lot runoff.
- **Pollution Hot Spot Runoff**
To protect groundwater from possible contamination, runoff from pollution hot spots should not be treated by soakaways, infiltration trenches or chambers.
- **Setback from Buildings**
Facilities should be setback a minimum of four (4) metres from building foundations.
- **Proximity to Underground Utilities**
Local utility design guidance should be consulted to define the horizontal and vertical offsets. Generally, requirements for underground utilities passing near the practice will be no different than for utilities in other pervious areas. However, the designer should consider the need for long term maintenance when locating infiltration facilities near other underground utilities.

CVC/TRCA LOW IMPACT DEVELOPMENT PLANNING AND DESIGN GUIDE - FACT SHEET

SOAKAWAYS, INFILTRATION TRENCHES AND CHAMBERS